


# Bore Gages

For easy and accurate measurement of inside diameters

## Extension Rod SERIES 511 — Accessories for Bore Gages

- Extension Rods (optional) are available to assist in deep-hole measurement.
- If two or more Extension Rods are connected together, measurement errors may occur due to flexure of the rod assembly. Therefore it is best to use no more than a single Extension Rod.
- Extension Rods are available up to 1,000 mm in length.
- Cannot be connected to products with special sizes or special specifications.
- When using a 500 mm (or longer) Extension Rod, use the bore gage in an upright position.
- The accuracy and security of the assembly should be confirmed after connecting an Extension Rod.

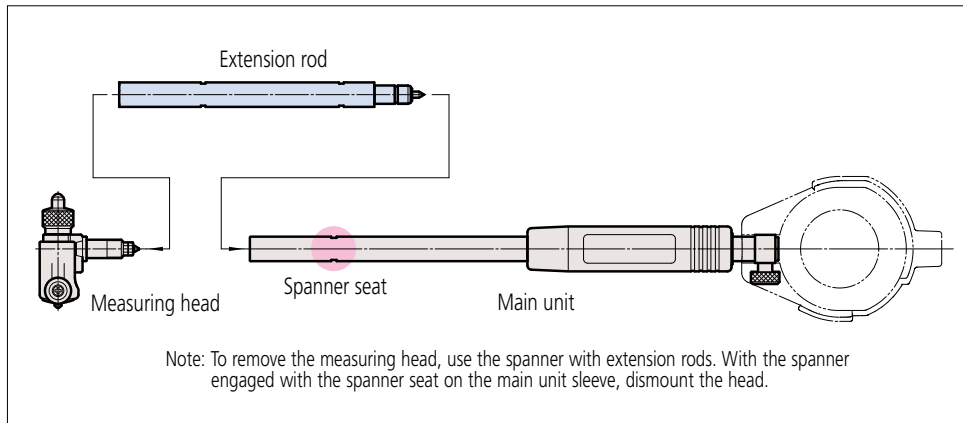

## SPECIFICATIONS

Applicable model Order No.	Extension rod length (mm)					Extension rod diameter (mm)	Spanner Order No.
	125	250	500	750	1000		
511-701/511-731 511-415/511-418 511-416/511-419 511-417/511-420	953549	953550	953551	—	—	ø9	102148 (2 pcs.)
511-702/511-732 511-703/511-733 511-704/511-734 511-803/511-833 511-804/511-834	953552	953553	953554	953555	953556	ø12	212556 (2 pcs.)
511-705/511-735 511-706/511-736 511-805/511-835 511-806/511-836 511-807/511-837 511-808/511-838	953557	952361	953558	953559	953560	ø15	212556 (2 pcs.)

Note 1: If an extension rod is attached, the measuring accuracy may degrade due to factors such as rod deflection.

Note 2: Spanner is supplied as standard.

## Protection cover

- Both the flat backplate of a dial indicator and backplate with a lug can be attached to a protection cover. It can also be attached to Digimatic Indicators (**543-310B**, **543-312B**).

